

INSTRUCTION MANUAL

ProAir™ **Air Conditioner** *CR43 Model*



McLean[®]
COOLING TECHNOLOGY

A Pentair Company

*Protecting Electronics.
Exceeding Expectations.™*

MAI
5736 North Michigan Road
Indianapolis, IN 46228

317-257-6811
317-257-1590 fax

ProAir CR43 Instruction Manual

TABLE OF CONTENTS

Receiving the Air Conditioner	1
Handling and Testing the Air Conditioner	1
Installation	2
System Controls	2
Design Data, Model Drawing	3
Cut out drawing	4
Components List	5
Wire Diagrams	6
Temperature Control	8
Principles of Operation	8
Maintenance	8-9
Trouble Shooting	10-11

NOTE: Some of the information in this manual may not apply if a special unit was ordered. If additional drawings for a special unit are necessary, they have been inserted. Contact MAI if further information is required.

RECEIVING THE AIR CONDITIONER

Inspect the air conditioner. Check for concealed damage that may have occurred during shipment. Look for dents, scratches, loose assemblies, evidence of oil, etc. Damage evident upon receipt should be noted on the freight bill. Damage should be brought to the attention of the delivering carrier -- NOT to MAI -- within 15 days of delivery. Save the carton and packing material and request an inspection. Then file a claim with the delivering carrier.

MAI cannot accept responsibility for freight damages; however, we will assist you in any way possible.

HANDLING & TESTING THE AIR CONDITIONER

If it is necessary to place the air conditioner in a horizontal position after unpacking, be certain it is placed in an upright, vertical or mounting position for a minimum of five (5) minutes before operating.

Never attempt to operate the air conditioner while it is horizontal or on its side, back or front. The refrigeration compressor is filled with lubricating oil. Running the compressor without oil in the lower part of the housing will cause permanent damage to the air conditioner. This also voids the warranty.

TEST FOR FUNCTIONALITY **BEFORE** MOUNTING THE AIR CONDITIONER TO THE ENCLOSURE.

Refer to nameplate for proper electrical current requirements, then connect power cord to a properly grounded power supply. Minimum circuit ampacity should be at least 125% of the amperage shown in the design data section for the appropriate model. No other equipment should be connected to this circuit to prevent overloading.

Operate the air conditioner for five (5) to ten (10) minutes. No excessive noise or vibration should be evident during this run period. The condenser blower (ambient air), the evaporator blower (enclosure air), and the compressor should be running.

Condenser air temperatures should be warmer than normal room temperatures within a few minutes.

The compressor is provided with automatic reset thermal overload protection. This thermo-switch is located and mounted inside the plastic enclosure clipped to the compressor. The switch operates when the compressor overheats due to clogged or dirty inlet air filter or if ambient air temperatures exceed nameplate rating or if enclosure dissipated heat loads exceed the rated capacity of the air conditioner. The thermal overload switch will actuate and stop compressor operation. The blowers will continue to operate and the compressor will restart after it has cooled to within the thermal overload cut-in temperature setting.

INSTALLATION

Step 1: Inspect air conditioner. Verify functionality before mounting the air conditioner, see Handling & Testing the Air Conditioner on page 1.

Step 2: Using the cutout dimensions shown in this manual, prepare the air "IN" and air "OUT" openings, and mounting bolt hole pattern for the enclosure.

Step 3: Using the gasket kit provided, install gaskets to air conditioner. See gasket kit illustration in this manual for proper location.

Step 4: Mount air conditioner on enclosure using mounting bolts and washers provided to secure unit to enclosure. Allow unit to remain upright for a minimum of five (5) minutes before starting. Caution: Air conditioner must be in upright position during operation.

Step 5: Refer to top of nameplate for electrical requirements. Connect the power cord to a properly grounded power supply. Use of an extension cord is not recommended. Electrical circuit should be fused with slow blow or HACR circuit breaker.

Step 6: When the unit is equipped with an automatic temperature controller, the controller is preset at the factory for your convenience and should not require adjustment.

SYSTEM CONTROLS


Level I Temperature Controller

The Level I controller is located inside the air conditioner. To adjust, disconnect power to the air conditioner. Open the front panel by loosening the front panel screw. Refer to figure 2 (page 4) to locate the controller. Turn the controller adjustment screw slot counter-clockwise to increase and clockwise to decrease the temperature set point (see figure 1). The thermostat cooling setpoint is indicated by the alignment of the adjustment screw slot with the dial decal. After completing adjustment, close the front panel and tighten the front panel screw. Restore power to the air conditioner for operation.

Level II and III Temperature Controller

The Level II and III controller mounted on the air conditioner front panel and is factory set for standard operation. All operating parameters are programmable for custom applications. Refer to the Level II and III programming and Operating Instruction Manual, 10-1008-161 (standard) or 10-1008-162 (low ambient).

Figure 1

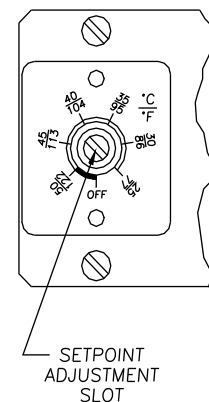

ProAir CR43


6000-8500 BTU/Hr. (1758-2490 Watts)

HxWxD: 43.31" (1100) x 15.75" (400) x 10.25" (260)


Model	Voltage	Hz	Phase	BTU/Hr @		Amps @		MAX Amb Temp °F/°C	Shipping Weight Lbs/Kgs
				131°F/131°F	131°F/131°F	131°F/131°F	95°F/95°F		
CR43-0615-XXX	115	50/60	1	5800/6000	14.6/13.7	4800/5100	12.5/11.0	131/55	131/59
CR43-0616-XXX	115	60	1	6000	13.7	5100	11.0	131/55	131/59
CR43-0625-XXX	230	50	1	6000	6.8	5100	5.3	131/55	131/59
CR43-0626-XXX	230	60	1	6000	6.9	5100	5.5	131/55	131/59
CR43-0815-XXX	115	50/60	1	7500/8500	15.0/16.0	6700/7500	13.5/12.9	131/55	138/63
CR43-0816-XXX	115	60	1	8500	16.0	7500	12.9	131/55	138/63
CR43-0825-XXX	230	50	1	7500	8.0	7500	6.1	131/55	138/63
CR43-0826-XXX	230	60	1	8500	8.2	7500	6.3	131/55	138/63

-XXX will be replaced with a three-digit number designating all desired options. Consult MAI for specific model numbers.

CR43 Model Drawing

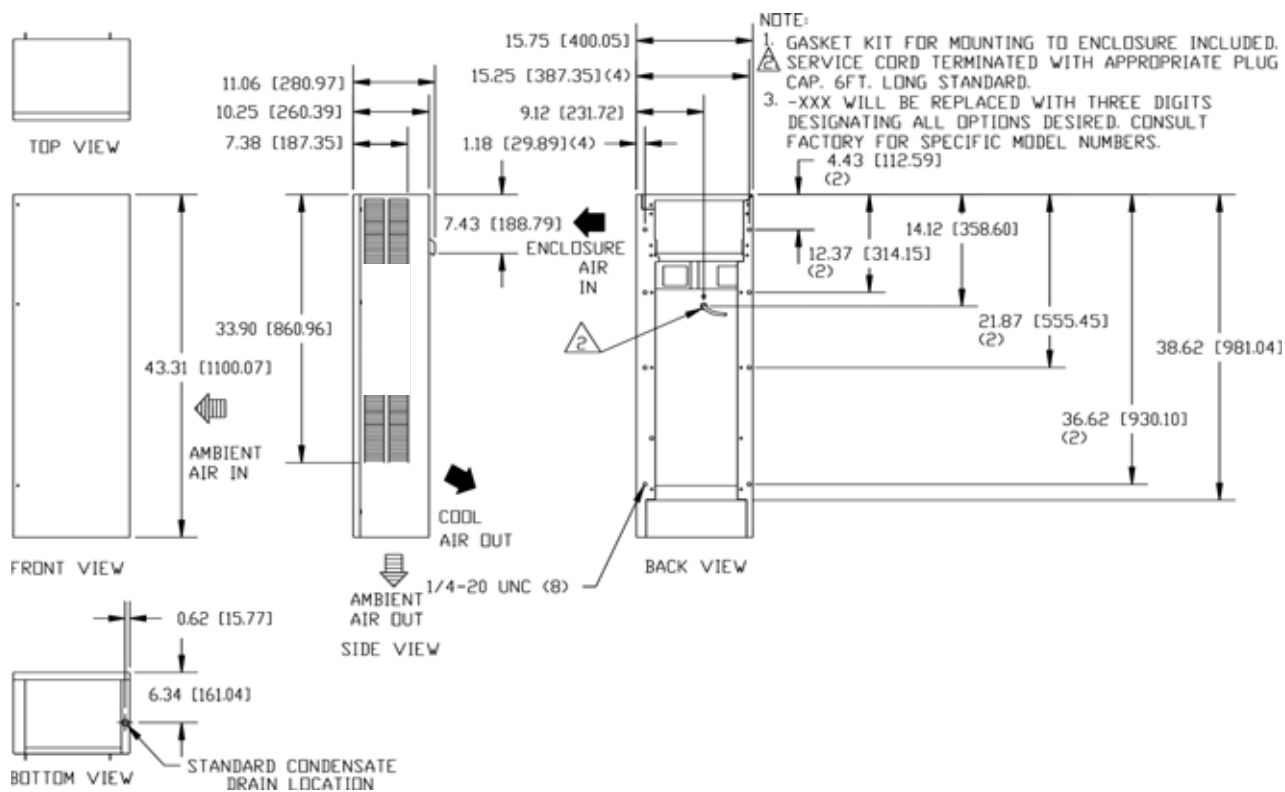

CR43 Mounting Cutout Dimension

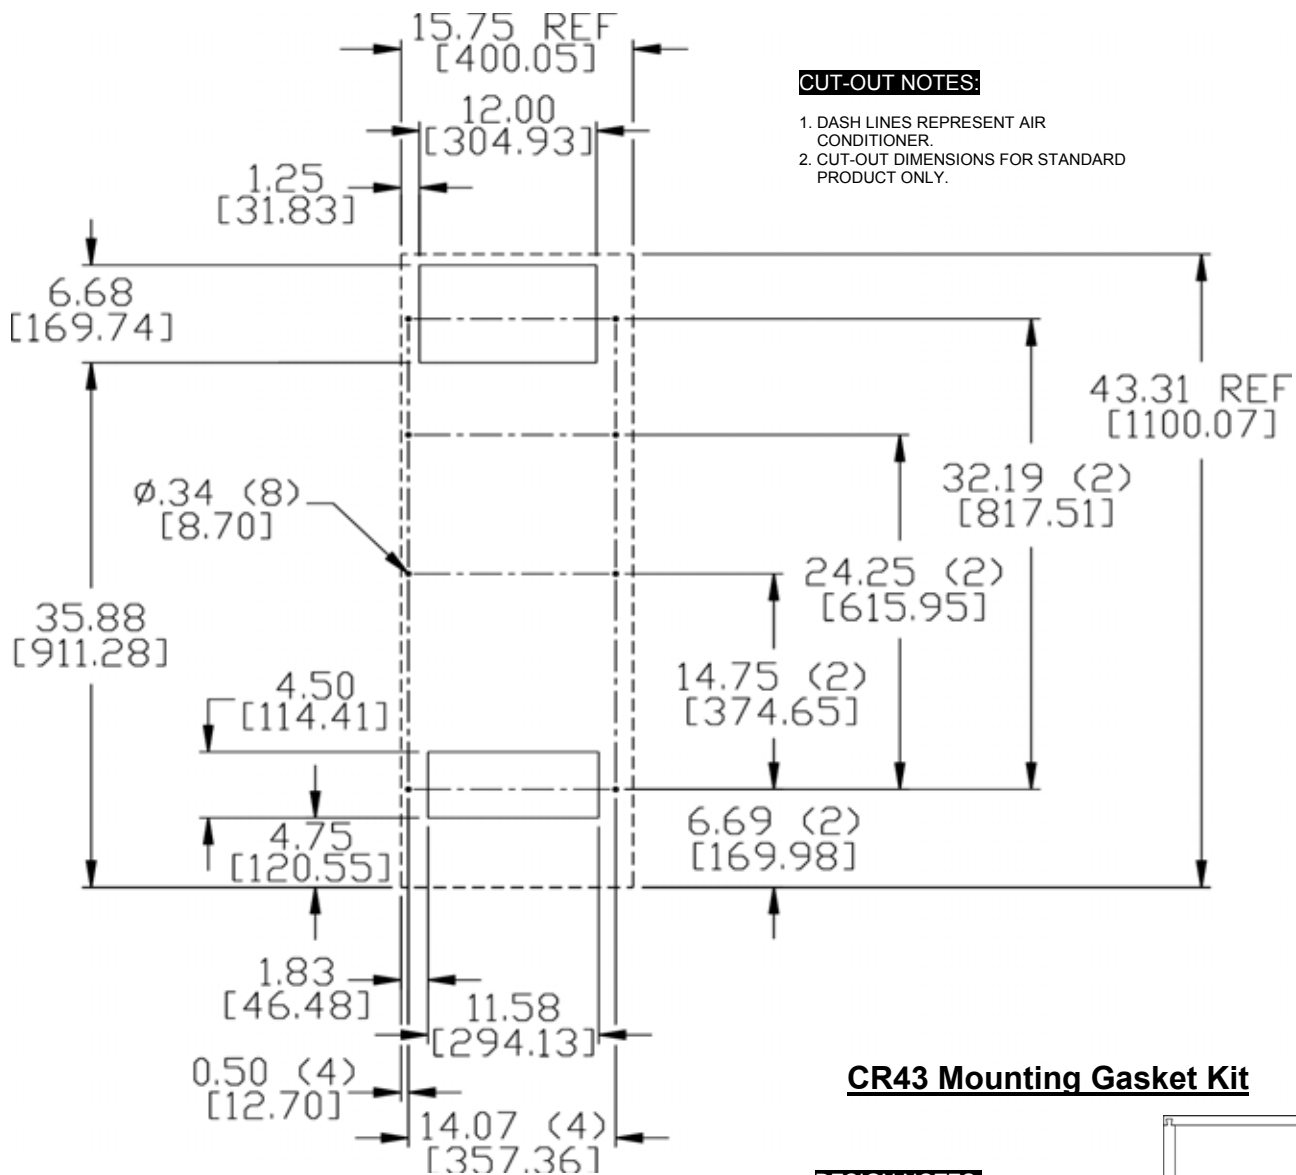

CUT-OUT NOTES:


1. DASH LINES REPRESENT AIR CONDITIONER.
2. CUT-OUT DIMENSIONS FOR STANDARD PRODUCT ONLY.

CR43 Mounting Gasket Kit

DESIGN NOTES:

1. GASKET KIT INCLUDED. APPLY GASKET TO REAR OF AIR CONDITIONER BEFORE MOUNTING ON ENCLOSURE.
2. SERVICE CORD TERMINATED WITH APPROPRIATE PLUG CAP.
3. MILLIMETER DIMENSIONS [] ARE FOR REFERENCE ONLY; DO NOT CONVERT TO INCH DIMENSIONS.
4. ALLOW AT LEAST 4" INLET AND 6" OUTLET CLEARANCE FOR PROPER AMBIENT AIR FLOW. ALLOW 20" ABOVE FILTER FOR REMOVAL.

MOUNTING GASKET KIT
PART NO. 43-2000-09 AS APPLIED TO
REAR OF CR43.

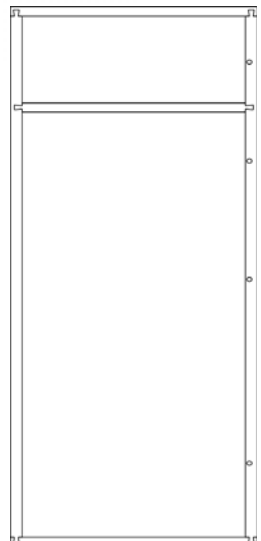


CR43 Components List

(Table A)



Part Description	CR43-0615-XXX 115 Volt 50/60 HZ 6000 BTU	CR43-0616-XXX 115 Volt 60 HZ 6000 BTU	CR43-0625-XXX 230 Volt 50 HZ 6000 BTU	CR43-0626-XXX 230 Volt 60 HZ 6000 BTU
Blower, Condenser	38-2019-04	38-2019-04	38-2020-04	38-2020-04
Blower, Evaporator	43-2013-01	43-2013-01	43-2013-02	43-2013-02
Capacitor, Compressor	52-6032-01	52-6032-01	52-6031-01	52-6031-01
Compressor	10-1016-10	10-1016-10	10-1025-08	10-1026-08
Thermal Overload, Compressor	10-1007-04	10-1007-04	10-1007-08	10-1007-11
Filter, Air, Reusable	10-1000-44	10-1000-44	10-1000-44	10-1000-44
Thermostat, SPST, 55-100F	52-6155-00	52-6155-00	52-6155-00	52-6155-00
Mounting Gasket Kit	43-2000-09	43-2000-09	43-2000-09	43-2000-09
Relay, Compressor	N/A	N/A	N/A	N/A
Power Cord	52-6035-01	52-6035-01	52-6035-13	52-6035-13
Evaporator Coil	43-2002-00	43-2002-00	43-2002-00	43-2002-00

Part Description	CR43-0815-XXX 115 Volt 50/60 HZ 8500 BTU	CR43-0816-XXX 115 Volt 60 HZ 8500 BTU	CR43-0825-XXX 230 Volt 50 HZ 7500 BTU	CR43-0826-XXX 230 Volt 60 HZ 8500 BTU
Blower, Condenser	52-6034-10	52-6034-10	52-6025-10	52-6025-10
Blower, Evaporator	38-2019-04	38-2019-04	38-2020-04	38-2020-04
Capacitor, Compressor	52-6032-01	52-6032-01	52-6031-01	52-6031-01
Compressor	10-1016-10	10-1016-10	10-1025-10	10-1026-10
Thermal Overload, Compressor	10-1007-04	10-1007-04	10-1007-09	10-1007-12
Filter, Air, Reusable	10-1000-44	10-1000-44	10-1000-44	10-1000-44
Thermostat, SPST, 55-100F	52-6155-00	52-6155-00	52-6155-00	52-6155-00
Mounting Gasket Kit	43-2000-09	43-2000-09	43-2000-09	43-2000-09
Relay, Compressor	N/A	N/A	N/A	N/A
Power Cord	52-6035-33	52-6035-33	52-6035-13	52-6035-32
Evaporator Coil	43-2002-01	43-2002-01	43-2002-01	43-2002-01

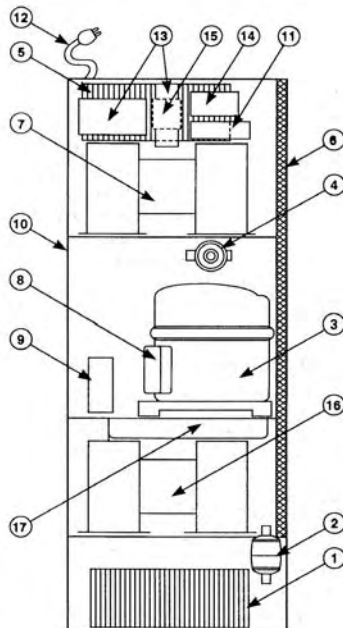

Part	Description	Part No.
1	Condenser Coil	43-2001-00
2	Filter, drier. Refrigerant	52-6028-00
3	Compressor	See Table A
4	Hot gas bypass valve	52-6027-00
5	Evaporator Coil	See Table A
6	Inlet air filter, reusable aluminum	10-1000-44
7	Evaporator blower	See Table A
8	Compressor thermal overload switch	See Table A
9	Capacitor, compressor	See Table A
10	Mounting gasket kit	43-2000-09
11	Terminal block	86912
12	Power cord	See Table A
13	Temperature controller Level I Level II (digital)	52-6155-00 10-1106-14
14	Relay (Level II only)	10-1005-21
15	Transformer (Level II only) 115v / 230v	10-1006-94 10-1006-93
16	Condenser Blower	See Table A
17	Condensate Pan	43-2017-00



CR43 Wire Diagram, Level I

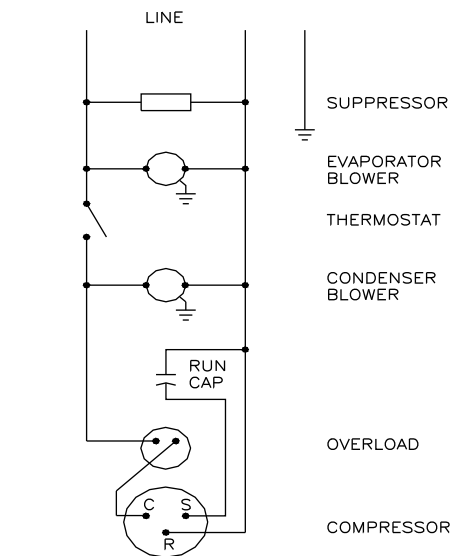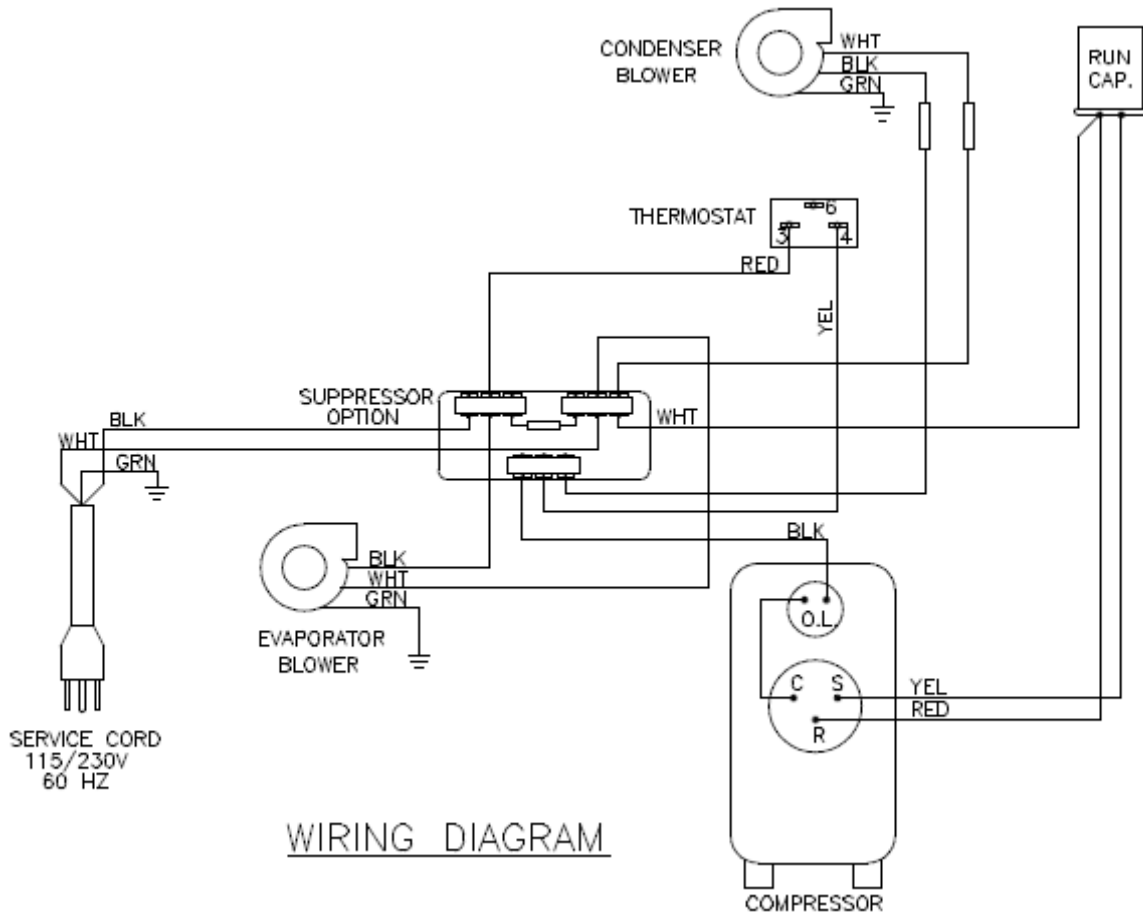

ELECTRICAL SCHEMATIC

NOTE: For voltage, hertz, and options not shown in this manual, refer to the wiring diagram attached to the unit.

CR43 Wire Diagram, Level II & III

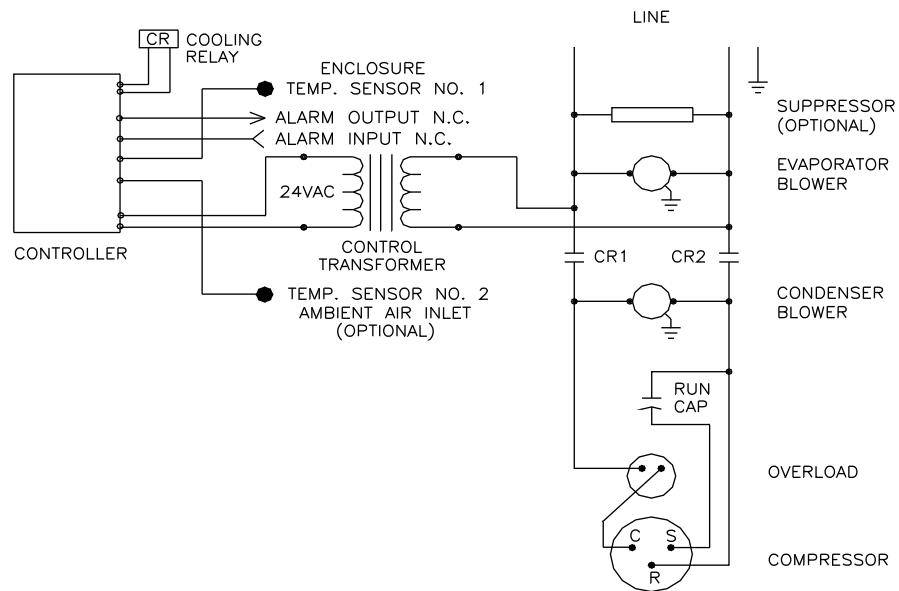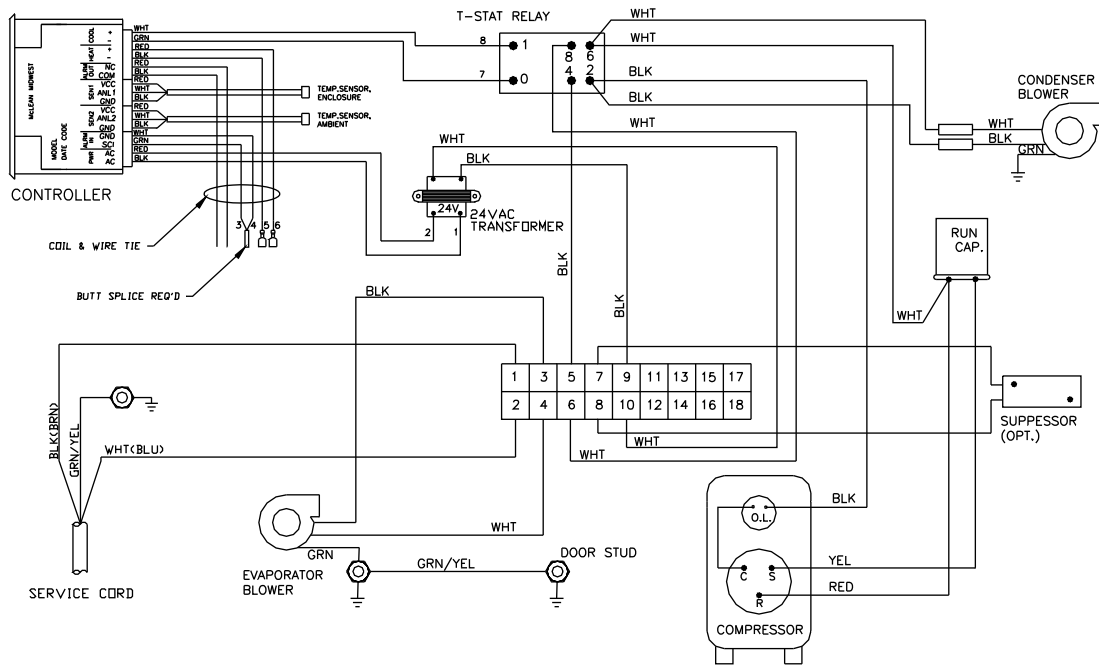

ELECTRICAL SCHEMATIC

TEMPERATURE CONTROL

The electromechanical thermostat is factory preset to 75°F/23°C. To change the temperature setting, remove the nylon plug from the back face of the unit. Use a standard screwdriver to adjust thermostat. For cooler temperatures turn clockwise, for warmer temperatures turn counterclockwise.

PRINCIPLES OF OPERATION

If electrical power to the air conditioner is interrupted and reapplied immediately, (within 3 to 5 seconds), the compressor may not restart due to the high back pressure of the compressor. It takes a minimum of one (1) minute after shut-down for the compressor suction and discharge pressures to equalize in order for the air conditioner to restart.

Operating the air conditioner below the minimum ambient temperature or above the maximum ambient temperatures indicated on the nameplate voids all warranties.

The moisture that the enclosure air can contain is limited. If moisture flows from the drain tube continuously this can only mean that ambient air is entering the enclosure. Be aware that frequent opening of the enclosure's door admits humid air which the air conditioner must then dehumidify.

MAINTENANCE

Compressor

The compressor requires no maintenance. It is hermetically sealed, properly lubricated at the factory and should provide years of satisfactory operating service.

Should the refrigerant charge be lost, recharging ports (access fittings) on the suction and discharge sides of the compressor are provided for recharging and/or checking suction and discharge pressures.

Under no circumstances should the access fitting covers be loosened, removed or tampered with.

Breaking of seals on compressor access fittings during warranty period will void warranty on hermetic system.

Recharging ports are provided for the ease and convenience of reputable refrigeration repair service personnel for recharging the air conditioner.

Inlet Air Filter

Proper maintenance of the inlet air filter, located behind the right side panel, will assure normal operation of the air conditioner. If filter maintenance is delayed or ignored, the maximum ambient temperatures under which the unit is designed to operate will be decreased.

If the compressor's operating temperature increases above designed conditions due to a dirty or clogged filter (or plugged condenser coil), the air conditioner's compressor will stop operating due to actuation of the thermal overload cut-out switch located on the compressor housing. As soon as the compressor temperature has dropped to within the switch's cut-in setting, the compressor will restart automatically. However the above condition will continue to take place until the filter or coil has been cleaned. It is recommended that power to the air conditioner be interrupted intentionally when abnormally high compressor operating temperature causes automatic shut-down of the unit.

The above described shut-down is symptomatic of a clogged or dirty filter, thus causing a reduction in cooling air flow across the surface of the compressor and condenser coil.

Do not run the air conditioner for extended periods of time with the filter removed. Particles of dust, lint, etc., can plug the fins of the condenser coil which will give the same reaction as a plugged filter. The condenser coil is not visible through the filter opening, so protect it with a filter.

Continued operation under the above conditions can and will damage and shorten compressor life. The air conditioner is available with an easily removable inlet filter to facilitate necessary cleaning. There should be no reason to neglect this necessary maintenance.

How To Remove, Clean or Install a New Inlet Air Filter

RP aluminum washable air filters are designed to provide excellent filtering efficiency with a high dust holding capacity and a minimum amount of resistance to air flow. Because they are constructed entirely of aluminum they are lightweight and easy to service. Optimum filter performance is maintained by recoating the filters after washing with RP Super Filter Coat adhesive. To achieve maximum performance from your air handling equipment, air filters should be cleaned on a regular basis.

The inlet air filter is located behind the right side panel. To access filter, pull from slot in top cover. The filter may now be cleaned or new filter installed.

Cleaning Instructions:

1. Flush the filter with warm water from the exhaust side to the intake side. DO NOT USE CAUSTICS.
2. After flushing allow filter to drain. Placing it with a corner down will assure complete drainage.
3. Recoat the filters with RP Super Filter Coat adhesive. When spraying filter do so from both sides for maximum concentration of adhesive.

Condenser and Evaporator Blowers

Blower motors require no maintenance. All bearings, shafts, etc. are lubricated during manufacturing for the life of the motor.

If the condenser blower motor (ambient blower) should fail, it is not necessary to remove the air conditioner from the cabinet or enclosure to replace the blower. The condenser blower is mounted on its own bulkhead and is easily accessible by opening the front cover.

Caution: Operation of the air conditioner in areas containing airborne caustics or chemicals can rapidly deteriorate filters, condenser coils, blowers and motors, etc. Contact MAI for special recommendations.

Refrigerant Loss

Each air conditioner is thoroughly tested prior to leaving the factory to insure against refrigeration leaks. Shipping damage or microscopic leaks not found with sensitive electronic refrigerant leak detection equipment during manufacture may require repair or recharging of the system. This work should only be performed by qualified professionals, generally available through a local, reputable air conditioning repair or service company.

Refer to the data on the nameplate which specifies the type of refrigerant and the charge size in ounces.

Before recharging, make sure there are no leaks and that the system has been properly evacuated into a deep vacuum.


TROUBLE SHOOTING

Basic Air Conditioning Trouble Shooting Check List

1. Check manufacturer's nameplate located on the unit for correct power supply.
2. Turn the power to the unit on. The evaporator (Enclosure or "COLD" air) blower should come on. Is there airflow?

YES, proceed to step # 3.

NO, possible: Open motor winding
 Stuck blower motor
 Obstructed wheels/blades




**Repair or Replace
defective parts.**

3. Check thermostat setting? Adjust thermostat to the lowest setting. This should turn the condenser blower and the compressor on. Did condenser blower and compressor come on when the thermostat was turned on?

YES, proceed to step #4.

NO, possible: Defective thermostat




Replace part.

4. Are both blowers and the compressor running? If not the unit will not cool properly.
5. Check condenser (Ambient or "HOT" air) blower for airflow. Is there airflow ?

YES, proceed to step # 6.

NO, possible: Defective thermostat
 Open motor winding
 Stuck blower motor
 Obstructed wheels/blades




**Repair or Replace
defective parts.**

6. Carefully check the compressor for operation - motor should cause slight vibration, and the outer case of the compressor should be warm.

YES, wait 5 minutes, then proceed to step #7.

NO, possible: Defective thermostat
 Defective capacitor
 Defective overload
 Defective relay



**Repair or Replace
defective parts.**

7. Make sure the coils are clean. Then check evaporator "air in" and "air out" temperatures. If the temperatures are the same:

Possible loss of refrigerant
Possible bad valves in the compressor



**Repair or Replace
defective parts.**

8. To check for a bad thermostat. Turn power to the unit off. Remove control box cover, place both thermostat wires onto one terminal (replace control box cover for safety). This will bypass the switch in the thermostat. Turn the power on. If both blowers and the compressor come on, the thermostat needs to be replaced.

Symptoms and Possible Causes:

<u>SYMPTOM</u>	<u>POSSIBLE CAUSE</u>
Unit won't cool	<ul style="list-style-type: none">* Blowers not running* Compressor not running* Compressor runs, but has bad valves* Loss of refrigerant
Compressor tries to start but won't run	<ul style="list-style-type: none">* Low line voltage at start. Should be +/-10% rated voltage* Compressor motor stuck* Bad relay* Bad overload switch* Bad run/start capacitor
Unit blows breakers	<ul style="list-style-type: none">* Under sized breaker/fuse or not time delayed* Short in system
Getting water in enclosure	<ul style="list-style-type: none">* Drain plugged* Drain tube kinked* Enclosure not sealed (allowing humidity in)

For additional technical information (i.e., amp draw, pressures, temperatures) contact MAI at 317-257-6811.

MAI

5736 North Michigan Road
Indianapolis, IN 46228

317-257-6811

317-257-1590 fax

*Protecting Electronics.
Exceeding Expectations.™*



McLean[®]
COOLING TECHNOLOGY

A Pentair Company

www.McLeanParts.net